

INSTALLATION MANUAL

EASY LOAD RAMP SYSTEM



714-269-5397 OR 714-815-9507

IMPORTANT INFORMATION

CAUTION

There are three clearly marked places where your fingers could possibly be pinched. One is on either edge of the Ramp as the Ramp Extension is moved to the folded position. The other is at the hinged end of the Ramp where the Ramp Extension end could meet the underside of the Ramp.

NOTE

Read these instructions completely.

NOTE

Manufacturing tolerances between the Easy Load Ramp System (ELRS) Receiver Hitch Insert (RHI) and your vehicles receiver hitch may allow movement of the system when installed. The Hitch Tite when installed will take out most of the movement.

NOTE

It is possible for the Chicago Screw hinge, at the mate point of the Ramp and Ramp Extension to loosen after many actions of folding and unfolding. It is recommended to tighten these Chicago Screws once in a while with a standard slot or Philips screw driver.

CONTENTS


1 - RECEIVER HITCH INSERT



1 - RAMP SUPPORT "T"



**2 - RAMPS and
2 - RAMP EXTENSIONS**

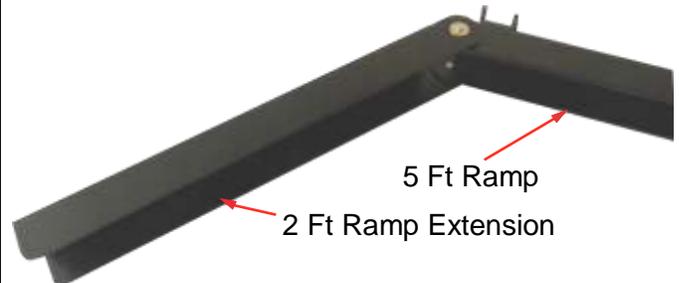

**1SET - NUTS, WASHERS,
BOLTS (The Hitch Tite takes
the place of one bolt set).**



4 - RAMP SPACERS



1 - HitchTite



1. RHI Installation



- a** Insert the end with four round 3/4" vertical wall penetrations into the vehicle receiver hitch.



- b** Determine which of the four penetrations to use to ensure one of the two large penetrations on the top of the RHI are clear of the vehicle bumper.



- c** Secure the RHI to the vehicle receiver hitch with an adjustable wrench and the provided Hitch Tite. Follow the provided Hitch Tite instructions.

2. Ramp Support “T” Installation



- a. *Select the large penetration in the top of the RHI which will avoid contact of the “T” with the vehicle’s rear bumper.*



- b. *Insert the vertical leg of the “T” in the selected large penetration.*



- c.** Lower the “T” until the horizontal bar of the “T” is level with the floor of the SUV, Mini-Van or Pick-up. Select the matching penetrations of the “T” and the RHI.



- d.** Secure the “T” to the RHI with the remaining set of provided bolts, nuts, and fender washers and lock washers.

3. Ramp Installation



- a. Place two Ramp Spacers on the horizontal bar, one on either side of the vertical leg of the “T”.

NOTE: Determine the distance between the wheels of the tricycle to be pushed up the ramp.



- b. Select one of the two Ramps with the Ramp Extension in the folded position and place it on one side of the vertical bar of the “T” using the Ramp Latch. Select the remaining Ramp, and do the same on the other side. Then move them as required

to establish correct spacing for your trikes wheels. Place the remaining two Ramp Spacers on the horizontal bar, outside of the Ramps and tighten them in place.



c. Unfold the Ramp extensions onto the SUV, Pick-up or Mini-Van.

Your ELRS is now ready to use.